

4005 0630/0330

Base Filler Pullout with Adjustable Shelves

INSTALLATION GUIDE



The Dowell Installation Guide serves as a general reference, offering step-by-step guidance for renovation professionals. The tools and fixtures supplied by Dowell for attaching to clients' floors or walls are intended as examples and might not be suitable for all types of surfaces. For optimal results, we recommend engaging a qualified professional to select the appropriate hardware for your specific installation needs. Dowell assumes no responsibility for complications arising from incorrect installation or the improper use of tools, including any subsequent damages.

4005 0630/0330

Base Filler Pullout with Adjustable Shelves
INSTALLATION GUIDE



Base Filler Pullout with Adjustable Shelves

Installation Instructions for Model #:


4005 0630 4005 0330

1 IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

2 TOOLS:

Phillips Scew Driver.

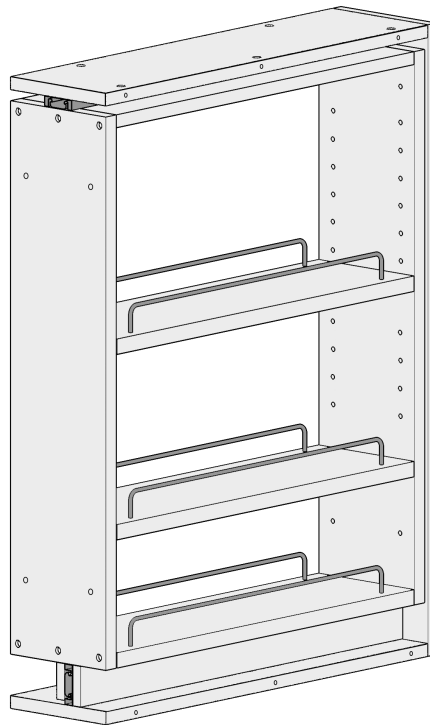


The Dowell Base Filler Pull-Out is crafted from premium solid wood. Featuring three adjustable shelves, this unit allows effortless customization to accommodate items of varying heights, delivering versatile and tailored storage solutions for diverse organizational needs.

4005 0630/0330

Base Filler Pullout with Adjustable Shelves
INSTALLATION GUIDE

DOWELL
KITCHEN & BATH

Recommended Tools



Screwdriver

Important Notes

*This product **must be** installed by professional renovators before the countertop and base cabinets are fully secured.*


Installation after cabinet/countertop completion may result in insufficient workspace.

Extra wood blocks (not included) may be required for large filler gaps.

STEP 1

Secure the Bottom of the Pullout


Align the bottom of the pullout's base with the bottom of the cabinet next to it (left and right). Using a screwdriver to tightly fasten the pullout's base with adjacent cabinets by using the pre-set screw holes at the bottom.

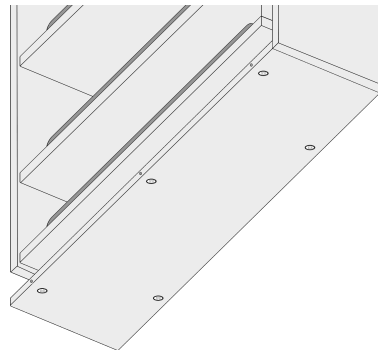

STEP 2

Attach the Top of the Pullout

Fasten the top of the pullout to the cabinet's side by using the pre-set holes.

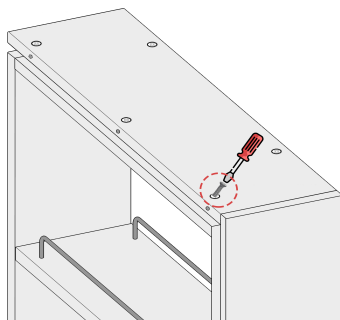

STEP 3

Install the Filler Door

Center the Deco Door with the pullout's front panel and align with other adjacent cabinet doors. Attach the door using the pre-set holes on the front panel.



Scan the QR code to view detailed product installation instructions and/or videos.